

FREEDOM

DRIVE

COVERAGE INCLUDES

- Engine
- Transmission
- Transfer Case
- Cooling
- Drive Axle
- Air Conditioning
- Electrical
- Fuel System
- Brakes
- Power Steering
- Suspension
- Turbo/Supercharger
- Seals & Gaskets

(Please see contract for more details)

**VEHICLES UP TO 15
YEARS OLD & UP TO 150K
MILES QUALIFY**



Licensed and Bonded



FREEDOM WARRANTY

Freedom Warranty of America, LLC

117 Lee Parkway, Suite 103

Chattanooga, TN 37421

1-877-249-4186

www.FreedomWarranty.com



FREEDOM

DRIVE

FREEDOM DRIVE

Engine

(Gas or Diesel): All internally lubricated parts within the engine including the pistons, piston rings, crankshaft and main bearings, timing chain, timing gears, cylinder head intake and exhaust valves, valve springs, valve guides, oil pump, push rods, rocker arms, rocker arm shafts, and hydraulic and solid lifters. All lubricated internal parts of the vehicle manufacturer installed turbo-charger or supercharger.

Transmission

(Automatic or Standard): All internally lubricated parts, torque converter and vacuum modulator.

Transfer Case

All internally lubricated parts including bearings, sprockets, chains, sleeves and gears.

Cooling

Radiator, fan, fan clutch and water pump.

Drive Axle

All internally lubricated parts contained within the housings including axle shafts.

Air Conditioning

Compressor, condenser, evaporator core, expansion valve and blower motor. Accumulator/receiver dryer and orifice tube are also covered when replaced in conjunction with a failed item listed above.

**30 Day and 1,000 mile Waiting Period required on vehicles with over 125,000 miles and/or purchased more than 14 days prior to purchase of VSC.*

Electrical

Alternator, voltage regulator, starter motor, starter solenoid, ignition switch, front and rear wiper motors and switches, headlamp switch, turn signal switch, rear defogger switch, heater/AC blower speed switch, power window motors and switches, power door lock actuator and switches.

Fuel System

Fuel delivery pump, fuel injection pump and metal fuel delivery lines.

Brakes

Master cylinder, power assist booster, vacuum assist booster pump, wheel cylinders, combination valves, disc calipers, self-adjusters and actuators.

Power Steering

All internally lubricated parts within the steering gear housing including power steering pump, main and intermediate shafts, couplings, pitman arm, idler arm, tie rod ends and center link. The steering gear housing is covered if the damage is caused by the failure of an internally lubricated part.

Turbo/ Supercharger

All internally lubricated parts of the vehicle manufacturer installed turbo-charger or supercharger. The housing is covered if damaged by the failure of a lubricated internal part.

Suspension

Upper and lower control radius, thrust and trailing arms, shafts, upper and lower ball joints, steering knuckles, stabilizer shaft, linkage, track bar, kingpin, spindle and spindle supports, torsion bars, coil and leaf springs, and wheel bearings.

Seals and Gaskets

The components/parts listed within are covered above if the starting true and accurate Vehicle starting odometer mileage is less than 75,000 miles. If the starting true and accurate Vehicle starting odometer mileage is between 75,000 and 125,000 miles then seals, sealing boots, and gaskets for the components listed are only covered if seals and gaskets surcharge has been purchased. If the true and accurate Vehicle starting odometer mileage is greater than 125,000 miles, then seals, sealing boots, and gaskets are not covered.

ADDITIONAL BENEFITS



**FREEDOM
WARRANTY**